

# GS8.2E Fast Slimming Machine

## Manual

 


---

# CONTENTS

Parts introduction.....	1
Annex .....	1
Basic Operation.....	2
Functions and operation .....	2
Notice .....	4
Forbidden group .....	4
Technical parameters.....	5
Annex List .....	5

## Parts introduction

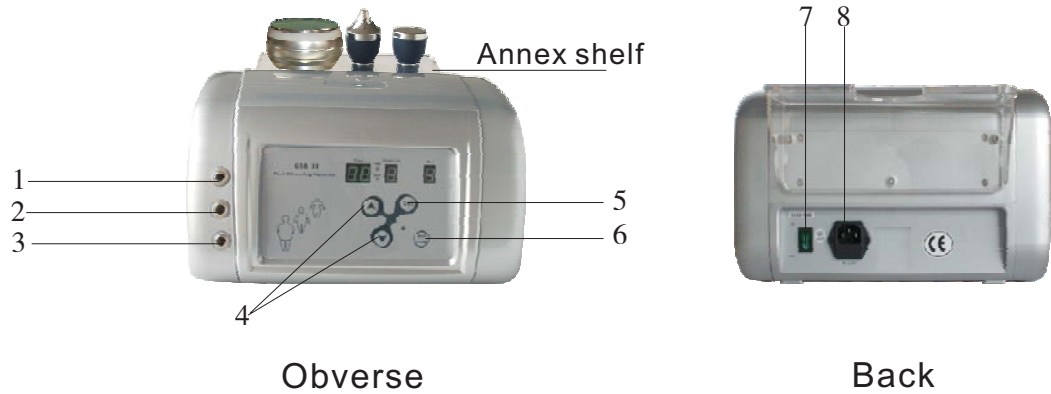

- |                               |                     |
|-------------------------------|---------------------|
| 1.M80 ultrasound head jack    | 8.Power supply line |
| 2.Medium supersonic head jack | 9.work time         |
| 3.Small supersonic head jack  | 10.Continuous Wave  |
| 4.Add button、Decrease button  | 11.Output intensity |
| 5.Function                    | 12.function         |
| 6.Start/pause                 | 13.Pulse wave       |
| 7.General power switch        |                     |

## Annex



M80 ultrasound head



Medium supersonic head



Small supersonic head

---

## Basic Operation

1. Place annex well and connect to mainframe.

- ① Insert M80 ultrasound head to [1].
- ② Insert medium supersonic head to [2].
- ③ Insert small supersonic head to [3].

2. Connect power line [8], turn on General power switch [7].

3. Press [5] function select button, move to the right place, the light will shine, press [4]. Setting functions, work time, work mode and output intensity, press [8] start working.

4. During operation, if you want to change to other functions within the setting time, please press [6] first, and press [5] to change.

5. Turn off the General power switch, unplug the power line when finished. Sterilize the used Work head.

## Functions and operation

### M80 ultrasound head

1. Applied gel on fleshy parts (eg. abdomen, hip, thigh) The amount depends on moving flexibility of the ultrasound head.
2. Set work time (10 min every part), Adjust output intensity (1 weak~5 strong).
3. Click "Start", press the button in the handle to start, press again to stop.
4. Beautician hold the ultrasound head to move slowly on skin, in circle or beeline repeatedly, the other hand push the fat towards the ultrasound head.
5. Do not use on back, avoid using on bones.
6. Do not use on uterus part when women do abdomen care. Abdomen treatment during Menstruate should be avoided.
  - \* Enough gel are needed, you may feel painful if medium is not enough.
  - \* The total treatment time for daily care should be within 30 min.
7. The machine will pause automatically if the setting time is over.
8. Clean the leftovers with hot towel, use warm towel to clean the ultrasound head.

---

## Supersonic function

Supersonic has a mechanical,hyperthermia and biochemical effect,make local tissue cells can be micro-massaged,promote blood circulation,soften organizations, speed up chemical reactions, and promote metabolism.It can promote blood circulation and lymph circulation,thus has the effect of detoxification, wrinkle removal,tightening,lifting,lightening flecks and eliminating pouch and dark circles.

- 1.To clean deeply,apply medium (nutrition gel, extract oil and etc) The amount should be according to moving flexibility of ultrasound head.
- 2.Set work time. Press [7] to choose medium or small ultrasound head according to parts need cared. (Medium size head suit for face and arms,the small size for eye and nosewing.
- 3.Setting work mod (1-continous wave output,2-pulse wave) ,to regulate output intensity according to different parts (1weak~9strong)
- 4.Press start to work.
- 5.During operation, if you want to change to other functions within the setting time, please press pause and then press [7] to move the cursor to the right place,then press [4] or [5] to Change,readjust work time,work mode,output intensity and press start.
- 6.The machine will stop automatically if the setting time if over.
- 7.Use warm water to clean skin.
- 8.Sterilize all the used ultrasound heads.

Applicable area	ultrasound head	output intensity	work mode	work time
tighten,lift,outline shaping	Medium	6 ~ 9	1 、 2	30min
wrinkle removal, whitening, lighten splash	Medium	5 ~ 9	1 、 2	20min
eye treatment, dispel dark cycle,pouch	Medium/ small	3 ~ 7	1	20min
sensitive skin	Medium	3 ~ 5	2	10min

---

## Notice

1. In operation, in order to maintain sufficient gel.
2. The ultrasound head should not stay out of work for too long time while outputting energy.  
Click "pause" to stop working to avoid damage.
3. M80 ultrasound heads should not stay still at one part for too long time,  
and do not use it on bones.
4. Please step on service brake then there will be sound wave exist when using  
M80 ultrasound head.
5. M80 ultrasound head can not be used on the back, avoid on the bones, and daily care should  
Be within 30 minutes every time.
6. Do not use on eyeball top, Adam's apple, heart. Do not stay still on one part for too long.

## Forbidden group

1. People who has fever, infectious diseases, acute diseases.
2. People with heart disease or configured cardiac pacemaker.
3. Patients with severe high blood pressure, tumor disease, asthma, deep vein thrombosis,  
Varix, thyroid ,cancer, falling sickness.
4. People with hemorrhagic disease, trauma, vascular rupture, skin inflammation, skin disease.
5. Pregnant women
6. Do not use at the abdomen during menstrual period
7. Medical Plastic parts, or parts with metal inside
8. People with an abnormal immune system

---

## Technical parameters

Voltage: AC 110V/60Hz、220V/50Hz

Power:  $\leq 75W$

Operating frequency: 1MHz/40KHz

## Annex List

1.Mainframe	1set
2.Power supply line	1pc
3.Use manual	1copy
4.Big ultrasound head	1pc
5.Medium Ultrasound head (with wire)	1pc
6.Small Ultrasound head (with wire)	1pc
7.Annex shelf	1pc
8.Hexagonal screws	3pcs
9. Hexagon Wrench	1pc